

WASHING YOUR LAUNDRY

STEP-BY-STEP INSTRUCTIONS



1 LOAD MACHINE

Load clothes loosely and securely close the door

* Only load machine to half full for front load or to the top of the agitator for top load



ONLY USE HIGH-EFFICIENCY DETERGENT

2 ADD DETERGENT

Open dispenser and add no more than 1/4 cup of **he** liquid detergent
OR
Add one pod to the wash tub



3 SELECT SETTINGS

Select your desired cycle

* For additional details on the cycle settings scan the QR Code below



DOING THE FOLLOWING WILL DESTROY CLOTHES OR EQUIPMENT

- X** OVERLOADING MACHINES
- X** WASHING RUGS OR BATH MATS
- X** SITTING ON MACHINES
- X** USING POWDER DETERGENT



4 MAKE PAYMENT


Use your Mobile ACT Card
OR
Physical ACT Card



5 START MACHINE

Push the START button to begin washing

BEST PRACTICES

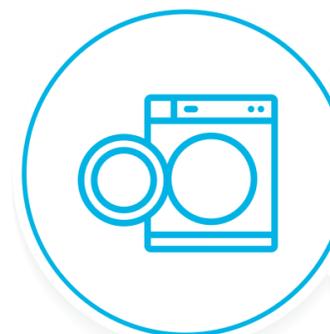

Leave the washer door open after each use to help the drum dry quickly.



Remove your clothes promptly so others can use the machine.



Using powder detergent can lead to damaged clothes and equipment.



If using a pod, use one per load. Never place the pod in the soap tray.

